Thank you for purchasing an **Escali** Digital Baby/Toddler Scale.

Please read the following operation information to ensure the proper function of your new scale.

How to weigh:

- 1) Press the "ON/TARE" button.
- 2) Zero will appear on display.

3) Place your child on the weighing platform. The display will show the weight of your child.

4) You can turn the scale off by pressing the "ON/TARE" button till it turns off, or wait till it automatically turns off after 30 seconds of non use.

Changing the Weighing Mode:

1) Turn the scale on.

- 2) Press the "MODE" button to change to Pounds, Pounds/Ounces or (Kilo)grams.
- 3) Your scale will keep the last used weighing mode in memory and will return automatically to this mode when you turn the scale on.

How to use the "Tare" feature:

This feature allows the display to be reset to zero after you have a weight reading on the display. With this feature you can zero out blankets, or other items.

1) Turn the scale on.

- 2) Place the item on the platform.
- 3) Press the "ON/TARE" button, and the weight of the item will be removed. The display value will reset to zero.

4) Place your child on the weighing platform. The display will show the weight of your child only.

How to clear the "Tare" feature:

1) Remove all items from the platform.

- 2) Press the "ON/TARE" button and the display value will reset to zero.
- 3) The scale is reset. You can continue with normal operating.

How to use the Hold feature

- 1) After the scale captures the weight a little circle will show in the top left corner of the display. Your scale will now automatically lock the reading on the display.
- 2) Remove your child from the platform, and the weight will show on the display until it automatically shuts off.

How to use the Memory feature

- This feature will keep the last recorded weight in memory so you can recall it next time you use the scale.
- 1) After the scale captures the weight press the "MEM" button.
- 2) Next time after turning on the scale, press the "MODE" button to select your measuring unit, followed by the "MEM" button to display the last recorded weight.
- 3) Press the "MEM" button again to return to the normal weighing mode.

Do not place overweight items on the scale

Weighing items over the maximum weight capacity will cause an "O-Id" to display. Immediately remove overweight items to avoid causing damage to your scale.

Converting your baby scale into a toddler scale

- 1) Reach under the baby cradle and pull the handles outward.
- 2) At the same time, lift the baby cradle up to reveal the toddler platform.

Power Source:4 pcs AA batteriesDimensions:24" x 14" x 4.25" (61cm x 35.5cm x 11cm)Graduation:1/2 oz. or 5 gramCapacity:44 Lb or 20 kilogramWeight Modes:Lb./Oz, Lb and (Kilo)gramsAuto Shut Off:Turns off after 30 seconds of non-use.

Additional Information

1) Make sure your scale is at room temperature and on a stable horizontal surface free of vibration.

- 2) This scale is not waterproof.
- 3) As this scale is a precision instrument, it must be handled with extreme care. Avoid rough treatment, shaking or vibration.
- 4) Do not disassemble this scale or the warranty will be void.
- 5) The display value may be affected by electromagnetic disturbances such as operating near a radio. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.

Battery Replacement

Replace the batteries when the low battery symbol appears on the display.

Warranty: Lifetime Limited Warranty, see www.escali.com for full details.

Escali's liability is limited to two (2) times the cost of the product.