

Assembling a Mercado dial scale

Tools needed: Phillips screw driver, and pliers



Remove cardboard guard from underneath the load assembly.



Use pliers to secure/grip the lock nut as pictured, and start loosening the screw with a Phillips screw driver from the load assembly.




Once screws, and nuts are removed from both ends, place the cross bracket on top of the load assembly aligning the holes as pictured.



Place the screw into the aligned holes of the cross bracket and the load assembly.



Using your fingers, take the lock nut and start tightening to the screw as best as you can.

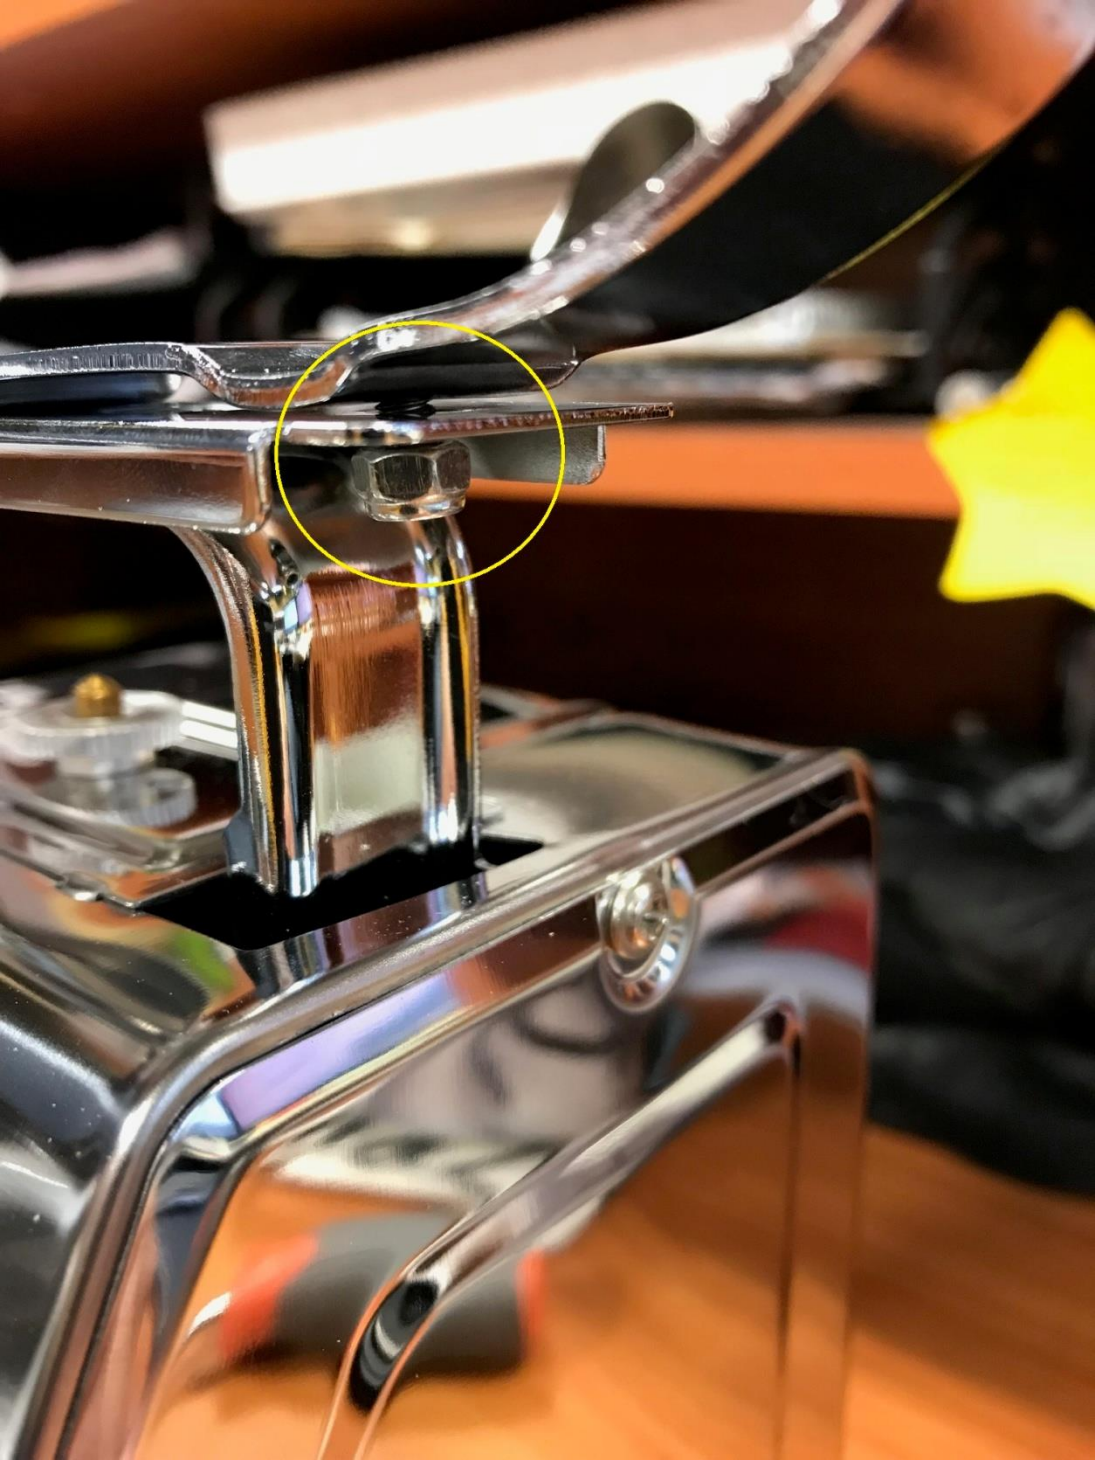

Finish off by using the pliers to hold the lock nut into place, and tightening the screw using the phillips screw driver as pictured.



Once the cross bracket is secured, place the stainless steel bowl on top of it.

